



# SAFETY NAIL


## Mounting

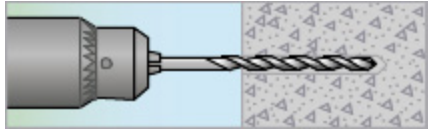

1. Drill hole  $\varnothing$  6 mm. Drill depth minimum 40 mm.

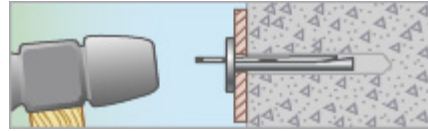

2. Install Safety Nail and knock in the protruding pin section until it is flush with the head.

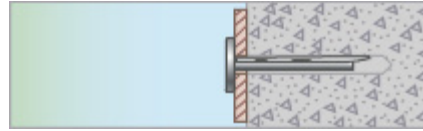

3. The installation is finished.